



Revision  
12/20/10

## Wear Pad Torque Specs. (For LCE Aluminum Flywheels)

LC Engineering always recommends changing your wear pad and hardware whenever you change clutches. The hardware may need to be machined out of the flywheel due to the locking nuts and extreme heat caused by the clutch.

**\*\*\*Torque new nuts to 29 inch pounds\*\*\***

**\*\*Always torque nuts in a star pattern around the flywheel to ensure even torque load\*\***

2031 Holly Avenue, Lake Havasu City, AZ 86404  
Office 928.505.2501 Fax 928.505.2503



Revision  
12/20/10

## Wear Pad Torque Specs. (For LCE Aluminum Flywheels)

LC Engineering always recommends changing your wear pad and hardware whenever you change clutches. The hardware may need to be machined out of the flywheel due to the locking nuts and extreme heat caused by the clutch.

**\*\*\*Torque new nuts to 29 inch pounds\*\*\***

**\*\*Always torque nuts in a star pattern around the flywheel to ensure even torque load\*\***

2031 Holly Avenue, Lake Havasu City, AZ 86404  
Office 928.505.2501 Fax 928.505.2503



Revision  
12/20/10

## Wear Pad Torque Specs. (For LCE Aluminum Flywheels)

LC Engineering always recommends changing your wear pad and hardware whenever you change clutches. The hardware may need to be machined out of the flywheel due to the locking nuts and extreme heat caused by the clutch.

**\*\*\*Torque new nuts to 29 inch pounds\*\*\***

**\*\*Always torque nuts in a star pattern around the flywheel to ensure even torque load\*\***

2031 Holly Avenue, Lake Havasu City, AZ 86404  
Office 928.505.2501 Fax 928.505.2503