

Wheel Spacer - Install Instructions

Wheel Spacer Kit Contents:

- 2 Aluminum Wheel Spacers
- 12 Lug Nuts

Instructions for installation:

Remove wheel.

Apply a small amount of anti-seize or WD-40 to wheel and spacer studs.

Slide wheel spacer onto hub. Use nuts provided with wheel spacers to attach spacer. To tighten nuts, use a thin wall 13/16" spark plug socket.

Torque nuts to 100 lbs.

Install wheel onto spacer, and use original nuts to attach wheel to spacer.

Torque wheel nuts to 100 lbs.

After truck has been driven 100 miles, the wheels should be removed and wheel spacer nuts should be retorqued to 100 lbs.

